



**AX4000FA** 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2293	Drive Gear Bushing	3871	Bushing Washer
0041	Drive Gear Washer	2516	Spool Support	3872	Anti-Reverse Pawl
0071	Rotor Nut	2541	Anti-Reverse Pawl Screw	3873	Anti-Reverse Pawl Spring
0080	Line Roller	2852	Handle Screw Lock	3874	Anti-Reverse Cam
0345	Anti-Reverse Lever Screw	2934	Flange Screw	4264	Bail Spring Guide (B)
0543	Side Cover Screw (small)	3503	Spool Washer	4267	Bail Trip Lever Washer
0787	Nut Lock Screw	3665	Slider Retainer Screw	4318	Bail Trip Lever
0792	Bearing Retainer Screw	3676	Drag Knob	4351	Anti-Reverse Lever
0815	Line Roller Washer	3677	Main Shaft	4362	Side Cover Screw (large-silver)
0940	Multi-Purpose Screw	3681	Bail Spring Guide (A)	4392	Bail Arm
1008	Handle Lock Washer	3682	Bail Spring	4398	Bail Assembly
1030	Handle Assembly	3690	Pinion Gear	5619	Bail Spring Cover
1310	Line Roller Screw	3694	Drive Gear	5620	Rotor
1442	Handle Screw Cap	3695	Oscillating Gear	5621	Side Cover Flange
1506	Multi-Purpose Screw	3696	Oscillating Slider	6850	Spool Assembly
1511	Lever Spring	3868	Lock Out Spring Holder	6873	Side Cover
1520	Anti-Reverse Cam Spring	3869	Anti-Reverse Lock Out Spring	6874	Body
1676	Side Cover Screw (large-black)	3870	Anti-Reverse Lock Out		