


# Calyx

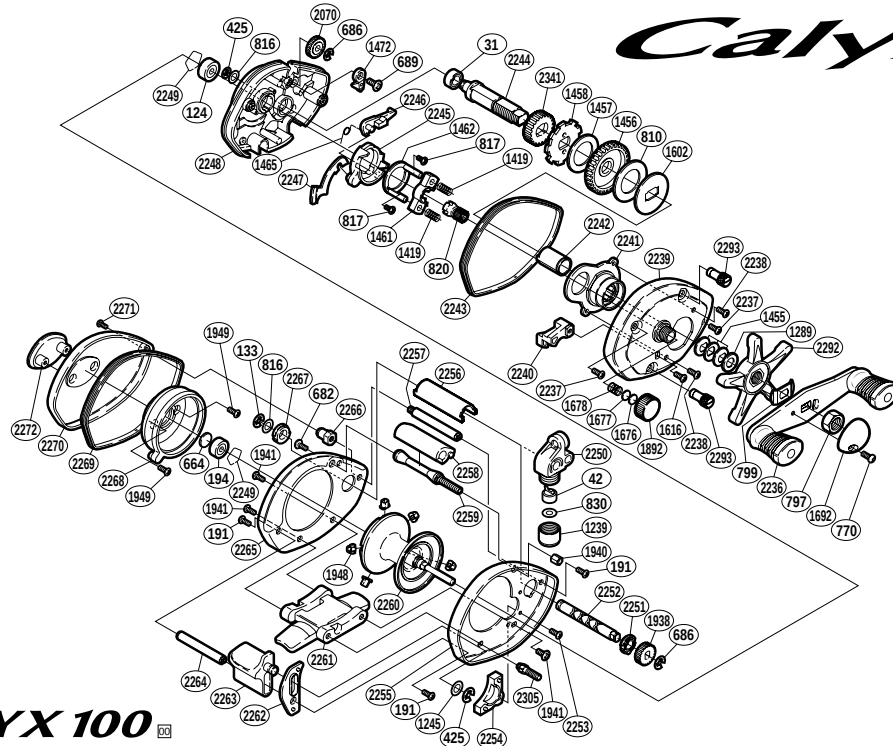

| BNT No. | PARTS NAMES               | BNT No. | PARTS NAMES              | BNT No. | PARTS NAMES                 |
|---------|---------------------------|---------|--------------------------|---------|-----------------------------|
| 0031    | Ball Bearing              | 1465    | Clutch Pawl Spring       | 2250    | Line Guide                  |
| 0042    | Line Guide Pawl           | 1472    | Anti-Reverse Pawl        | 2251    | Worm Bushing (A)            |
| 0124    | Ball Bearing              | 1602    | Key Washer               | 2252    | Worm Shaft                  |
| 0133    | Worm Shaft Retainer       | 1616    | Return Pin Guide Screw   | 2253    | Drive Shaft Cover Screw     |
| 0191    | Multi-Purpose Screw       | 1676    | Spool Tension Spacer (B) | 2254    | Drive Shaft Cover           |
| 0194    | Ball Bearing              | 1677    | Spool Tension Spacer (A) | 2255    | A-Side Frame                |
| 0425    | "E" Lock                  | 1678    | Spool Tension Spring     | 2256    | Level Wind Guard            |
| 0664    | Spacer (B)                | 1692    | Handle Nut Plate         | 2257    | Stabilizer Bar              |
| 0682    | Frame Bar (A) Screw       | 1892    | Cast Control Cap         | 2258    | Thumb Rest                  |
| 0686    | "E" Lock                  | 1938    | Idle Gear (C)            | 2259    | Frame Bar (A)               |
| 0689    | Anti-Reverse Pawl Screw   | 1940    | Frame Nut                | 2260    | Spool Assembly              |
| 0770    | Handle Nut Plate Screw    | 1941    | Stand Screw              | 2261    | Stand                       |
| 0797    | Handle Nut                | 1948    | Brake Collar             | 2262    | Clutch Button Guide         |
| 0799    | Friction Washer           | 1949    | I.D.Plate Screw          | 2263    | Quick-Fire II Clutch Button |
| 0810    | Drag Washer               | 2070    | Idle Gear (B)            | 2264    | Clutch Button Support Bar   |
| 0816    | Shaft Washer              | 2236    | Handle Assembly          | 2265    | B-Side Frame                |
| 0817    | Clutch Cam Retainer Screw | 2237    | Right Side Plate Screw   | 2266    | B-Side Frame Nut            |
| 0820    | Pinion Gear               | 2238    | Bush Plate Screw         | 2267    | Worm Bushing (B)            |
| 0830    | Spacer (optional)         | 2239    | Right Side Plate         | 2268    | Brake Case                  |
| 1239    | Pawl Cap                  | 2240    | Return Pin Guide         | 2269    | B-Side Seal                 |
| 1245    | Clutch Bar Support Spacer | 2241    | Roller Clutch Assembly   | 2270    | Left Side Plate             |
| 1289    | Star Drag Spacer          | 2242    | Roller Clutch Inner Tube | 2271    | Left Side Plate Screw       |
| 1419    | Yoke Spring               | 2243    | A-Side Seal              | 2272    | Left Side I.D.Plate         |
| 1455    | Drag Spring Washer        | 2244    | Drive Shaft              | 2292    | Star Drag                   |
| 1456    | Drive Gear                | 2245    | Clutch Cam               | 2293    | Right Side Plate Nut        |
| 1457    | Drive Shaft Washer (B)    | 2246    | Clutch Pawl              | 2305    | Stand Bolt                  |
| 1458    | Anti-Reverse Ratchet      | 2247    | Clutch Plate             | 2341    | Idle Gear (A)               |
| 1461    | Yoke                      | 2248    | Set Plate                |         |                             |
| 1462    | Clutch Cam Retainer       | 2249    | Bearing Retainer         |         |                             |

(110901)