



BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0009	Spacer (A)	1696	Cast Control Spacer (B)	2511	Side Plate Nut Washer
0031	Ball Bearing	1697	Spool Tension Spring	2512	Right Side Plate Screw
0042	Line Guide Pawl	1853	Key Washer (A)	2513	Right Side Plate
0133	Worm Shaft Retainer	1927	Anti-Reverse Ratchet	2514	"O" Ring
0188	"O" Ring	1930	Clutch Cam Screw	2515	Cast Control Bushing
0194	Ball Bearing	1931	Retractor Spring	2516	Drag Washer (AG)
0425	"E" Lock	1934	Clutch Pawl Spring	2517	Drag Washer (CG)
0664	Spacer (B)	1936	Clutch Plate	2518	Drag Washer (BG)
0686	"E" Lock	1938	Idle Gear (C)	2519	Drive Gear
0795	Handle Nut Plate Screw	1948	Brake Collar	2520	Drive Shaft Washer (B)
0797	Handle Nut	1949	I.D. Plate Screw	2521	Drive Shaft
0799	Friction Washer	2050	Clutch Cam Retainer	2522	Pinion Gear
0816	Shaft Washer	2070	Idle Gear (B)	2523	Set Plate
0830	Spacer (optional)	2098	Cast Control Cap	2524	Worm Shaft
1092	Pawl Cap	2238	Bush Plate Screw	2525	Level Wind Guard
1133	Yoke Spring	2242	Roller Clutch Inner Tube	2526	Stabilizer Bar
1201	Retractor Spring Collar	2249	Bearing Retainer	2527	Line Guide
1227	Push Nut (SPN-2)	2267	Worm Bushing (B)	2528	Spool Assembly
1245	Clutch Bar Support Spacer	2295	Roller Clutch Assembly	2529	Clutch Button Guide (A)
1455	Drag Spring Washer (H)	2296	Return Pin Guide	2530	Clutch Button Support Bar
1472	Anti-Reverse Pawl	2299	Idle Gear (A)	2531	Clutch Button Guide (B)
1613	Drag Spring Washer (L)	2301	Clutch Cam	2532	Quick-Fire II Clutch Bar
1616	Return Pin Guide Screw	2302	Clutch Pawl	2533	One-Piece Frame
1618	Key Washer (C)	2508	Handle Assembly	2534	Left Side Plate
1620	Eared Washer	2509	Star Drag	2535	Left Side I.D. Plate
1673	Handle Nut Plate	2510	Right Side Plate Nut	2797	Yoke