



BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0009	Spacer (A)	1788	Handle Nut	2514	"O" Ring
0031	Ball Bearing	1853	Key Washer (A)	2515	Cast Control Bushing
0042	Line Guide Pawl	1927	Anti-Reverse Ratchet	2516	Drag Washer (AG)
0133	Worm Shaft Retainer	1930	Clutch Cam Screw	2517	Drag Washer (CG)
0188	"O" Ring	1938	Idle Gear (C)	2518	Drag Washer (BG)
0194	Ball Bearing	1948	Brake Collar	2520	Drive Shaft Washer (B)
0425	"E" Lock	1949	I.D. Plate Screw	2527	Line Guide
0664	Spacer (B)	2050	Clutch Cam Retainer	2535	Right Side I.D. Plate
0686	"E" Lock	2070	Idle Gear (B)	2537	Worm Shaft
0795	Handle Nut Plate Screw	2077	Yoke	2538	Level Wind Guard
0799	Friction Washer	2078	Retractor Spring	2539	Stabilizer Bar
0816	Shaft Washer	2081	Clutch Pawl Spring	2540	Spool Assembly
0830	Spacer (optional)	2083	Clutch Plate	2541	Clutch Button Support Bar
1092	Pawl Cap	2098	Cast Control Cap	2771	Star Drag
1133	Yoke Spring	2238	Bush Plate Screw	2773	Drive Gear
1201	Retractor Spring Collar	2242	Roller Clutch Inner Tube	2774	Drive Shaft
1227	Push Nut (SPN-2)	2249	Bearing Retainer	2775	Pinion Gear
1245	Clutch Bar Support Spacer	2267	Worm Bushing (B)	2776	Set Plate
1455	Drag Spring Washer (H)	2299	Idle Gear (A)	2777	Worm Bushing (A)
1472	Anti-Reverse Pawl	2326	Roller Clutch Assembly	2779	Clutch Button Guide (A)
1613	Drag Spring Washer (L)	2327	Return Pin Guide	2780	Clutch Button Guide (B)
1616	Return Pin Guide Screw	2330	Clutch Cam	2783	Right Side Plate
1618	Key Washer (C)	2331	Clutch Pawl	2784	Left Side Plate
1620	Eared Washer	2508	Handle Assembly	2785	One-Piece Frame
1673	Handle Nut Plate	2510	Left Side Plate Nut	2786	Quick-Fire II Clutch Bar
1696	Cast Control Spacer (B)	2511	Side Plate Nut Washer		
1697	Spool Tension Spring	2512	Left Side Plate Screw		