



Crysalis 96

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0015	Drag Spring Washer	1092	Pawl Cap	1475	Quick-Fire II Clutch Bar
0042	Line Guide Pawl	1419	Yoke Spring	1476	Drive Shaft Washer (D)
0194	Ball Bearing	1450	Star Drag	1478	Magnet Holder
0291	Side Plate Screw	1454	Bearing Bushing	1479	Magnet Retainer
0425	Drive Gear Retainer	1455	Drag Spring Washer	1480	Dial Case
0661	Magnet Retainer Spring	1456	Drive Gear	1481	Magnetic Control Dial
0664	Spacer (B)	1457	Drive Shaft Washer (B)	1483	Lock Spring
0795	Handle Nut Plate Screw	1458	Anti-Reverse Ratchet	1484	Lock Screw Cap
0797	Handle Nut	1459	Drive Shaft	1551	Dial Friction Washer
0799	Friction Washer	1460	Clutch Plate	1606	Spool
0801	Cast Control Cap	1461	Yoke	1666	Spool Tension Spacer (A)
0802	Spool Tension Spacer (B)	1462	Clutch Cam Retainer	1667	Worm Gear
0804	Spool Tension Spring	1463	Clutch Cam	1668	Worm Shaft Washer (A)
0807	Drive Shaft Bearing	1464	Clutch Pawl	1669	Worm Shaft
0808	Friction Washer (B)	1465	Clutch Pawl Spring	1670	Worm Bushing
0809	Key Washer	1467	Level Wind Guard	1671	Worm Shaft Washer (B)
0810	Drag Washer	1468	Level Wind Protector	1672	"E" Lock
0817	Multi-Purpose Screw	1469	Line Guide	1673	Handle Nut Plate
0819	Drive Shaft Bushing	1471	Drive Shaft Cover	1708	Handle Assembly
0820	Pinion Gear	1472	Anti-Reverse Pawl	1709	Right Side Plate
0830	Spacer (optional)	1473	Multi-Purpose Screw	1710	Thumb Rest
0835	Spool Shaft Bushing (B)	1474	One-Piece Frame	1711	Left Side Plate