


CU-200 94

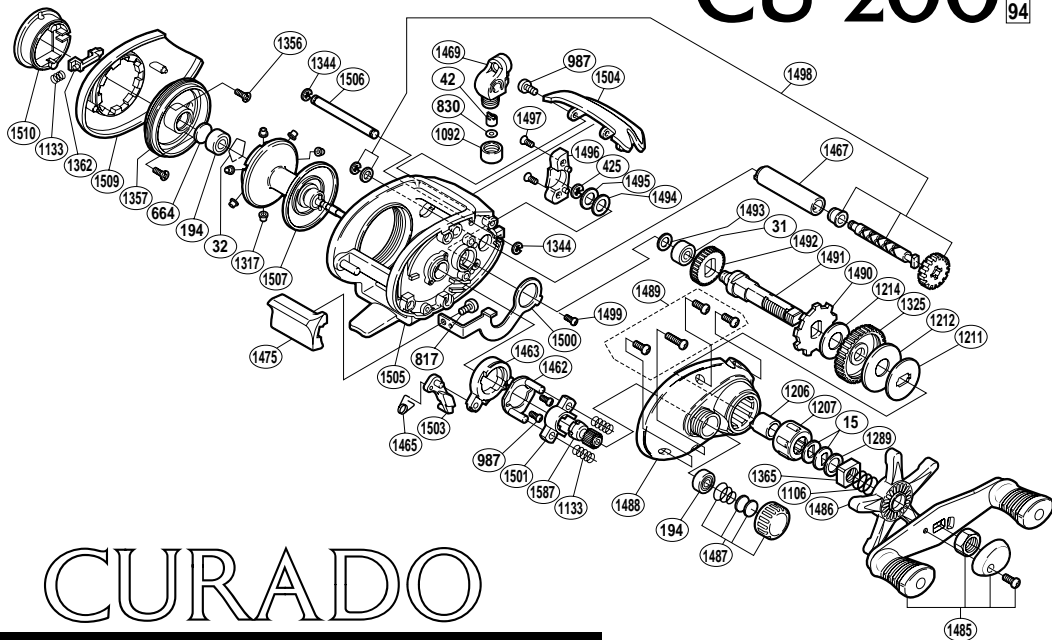

CURADO

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0015	Drag Spring Washer	1317	Brake Collars (red-6 pieces)	1491	Drive Shaft
0031	Ball Bearing	1325	Drive Gear	1492	Idle Gear
0032	Bearing Retainer	1344	"C"Lock	1493	Drive Gear Washer
0042	Line Guide Pawl	1356	Brake Case Retainer Screw	1494	Drive Shaft Washer (B)
0194	Ball Bearing	1357	Brake Case	1495	Drive Shaft Washer (A)
0425	"E"Lock	1362	Turnkey Pawl	1496	Drive Shaft Cover
0664	Spacer (B)	1365	Star Drag Nut	1497	Drive Shaft Cover Screw
0817	Clutch Bar Screw	1462	Clutch Cam Retainer	1498	Worm Shaft Assembly
0830	Spacer (optional)	1463	Clutch Cam	1499	Clutch Plate Screw
0987	Multi Purpose Screw	1465	Clutch Pawl Spring	1500	Clutch Plate
1092	Pawl Cap	1467	Level Wind Guard	1501	Yoke
1106	Star Drag Spring	1469	Line Guide	1503	Clutch Pawl
1133	Yoke / Turnkey Pawl Spring	1475	Quick-Fire II Clutch Bar	1504	Thumb Rest
1206	Roller Clutch Inner Tube	1485	Handle Assembly	1505	One-Piece Frame
1207	Roller Clutch Bearing	1486	Star Drag	1506	Line Guard
1211	Key Washer	1487	Cast Control Cap Assembly	1507	Spool Assembly
1212	Drag Washer (C)	1488	Right Side Plate	1509	Left Side Plate
1214	Drag Washer (A)	1489	Side Plate Screws	1510	Turnkey Dial
1289	Star Drag Spacer	1490	Anti-Reverse Ratchet	1587	Pinion Gear