



Bantam
CURADO
CU-200B38 02

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0015	Drag Spring Washer	1356	Brake Case Retainer Screw	1503	Clutch Pawl
0031	Ball Bearing	1357	Brake Case	1505	One-Piece Frame
0032	Bearing Retainer	1362	Turnkey Pawl	1506	Line Guard
0042	Line Guide Pawl	1365	Star Drag Nut	1507	Spool Assembly
0194	Ball Bearing	1423	Key Washer	1509	Left Side Plate
0425	"E" Lock	1424	Drag Washer (C)	1510	Turnkey Dial
0664	Spacer (B)	1462	Clutch Cam Retainer	1670	Worm Bushing
0786	Side Plate Screw (short)	1463	Clutch Cam	1671	Worm Shaft Washer (B)
0795	Handle Nut Plate Screw	1465	Clutch Pawl Spring	1672	"E" Lock
0797	Handle Nut	1467	Level Wind Guard	1715	Brake Collar (red)
0802	Spool Tension Spacer (B)	1469	Line Guide	1993	Handle Nut Plate Assembly
0803	Spool Tension Spacer (A)	1475	Quick-Fire II Clutch Bar	1994	Handle Assembly
0817	Clutch Bar Screw	1486	Star Drag	1995	Cast Control Cap
0830	Spacer (optional)	1490	Anti-Reverse Ratchet	1996	Spool Tension Spring
0987	Multi-Purpose Screw	1491	Drive Shaft	1998	Side Plate Screw (long)
1092	Pawl Cap	1492	Idle Gear (A)	1999	Idle Gear (C)
1106	Star Drag Spring	1493	Drive Gear Washer	2000	Worm Shaft
1133	Yoke / Turnkey Pawl Spring	1494	Drive Shaft Washer (B)	2798	Right Side Plate
1206	Roller Clutch Inner Tube	1495	Drive Shaft Washer (A)	2799	Drive Gear
1207	Roller Clutch Bearing	1496	Drive Shaft Cover	2800	Pinion Gear (A)
1214	Drag Washer (A)	1497	Drive Shaft Cover Screw	2801	Yoke
1289	Star Drag Spacer	1499	Clutch Plate Screw	2802	Thumb Rest
1344	"C" Lock	1500	Clutch Plate		