


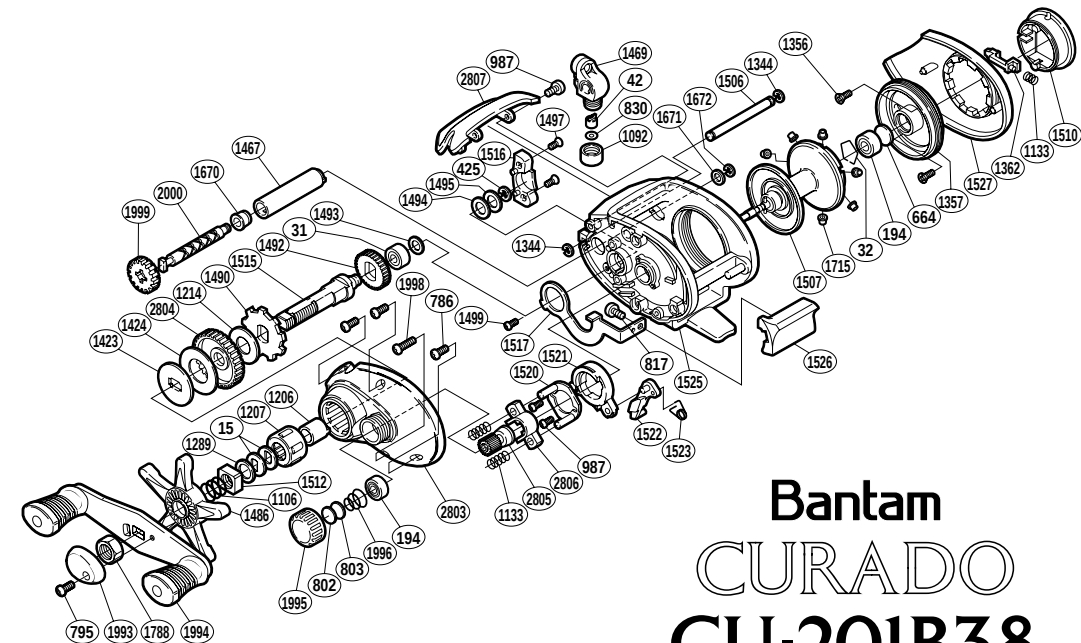

Bantam CURADO CU-201B38 02

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0015	Drag Spring Washer	1357	Brake Case	1522	Clutch Pawl
0031	Ball Bearing	1362	Turnkey Pawl	1523	Clutch Pawl Spring
0032	Bearing Retainer	1423	Key Washer	1525	One-Piece Frame
0042	Line Guide Pawl	1424	Drag Washer (C)	1526	Quick-Fire II Clutch Bar
0194	Ball Bearing	1467	Level Wind Guard	1527	Right Side Plate
0425	"E" Lock	1469	Line Guide	1670	Worm Bushing
0664	Spacer (B)	1486	Star Drag	1671	Worm Shaft Washer (B)
0786	Side Plate Screw (short)	1490	Anti-Reverse Ratchet	1672	"E" Lock
0795	Handle Nut Plate Screw	1492	Idle Gear (A)	1715	Brake Collar (red)
0802	Spool Tension Spacer (B)	1493	Drive Gear Washer	1788	Handle Nut
0803	Spool Tension Spacer (A)	1494	Drive Shaft Washer (B)	1993	Handle Nut Plate Assembly
0817	Clutch Bar Screw	1495	Drive Shaft Washer (A)	1994	Handle Assembly
0830	Spacer (optional)	1497	Drive Shaft Cover Screw	1995	Cast Control Cap
0987	Multi-Purpose Screw	1499	Clutch Plate Screw	1996	Spool Tension Spring
1092	Pawl Cap	1506	Line Guard	1998	Side Plate Screw (long)
1106	Star Drag Spring	1507	Spool Assembly	1999	Idle Gear (C)
1133	Yoke / Turnkey Pawl Spring	1510	Turnkey Dial	2000	Worm Shaft
1206	Roller Clutch Inner Tube	1512	Star Drag Nut	2803	Left Side Plate
1207	Roller Clutch Bearing	1515	Drive Shaft	2804	Drive Gear
1214	Drag Washer (A)	1516	Drive Shaft Cover	2805	Pinion Gear (A)
1289	Star Drag Spacer	1517	Clutch Plate	2806	Yoke
1344	"C" Lock	1520	Clutch Cam Retainer	2807	Thumb Rest
1356	Brake Case Retainer Screw	1521	Clutch Cam		