


DX

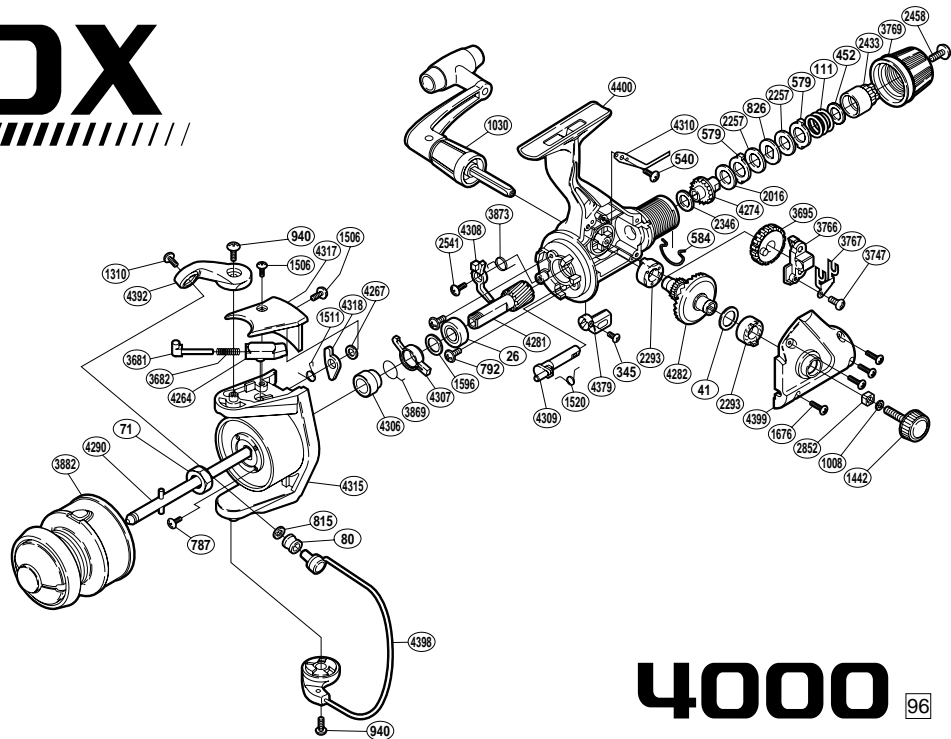

4000

96

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	1520	Anti-Reverse Cam Spring	4264	Bail Spring Guide (B)
0041	Drive Gear Washer	1596	Bushing Washer	4267	Bail Trip Lever Washer
0071	Rotor Nut	1676	Side Cover Screw	4274	Drag Shaft
0080	Line Roller	2016	Drag Washer "H"(cloth)	4281	Pinion Gear
0111	Drag Coil Spring	2257	Drag Washer "H"(blue)	4282	Drive Gear
0345	Anti-Reverse Lever Screw	2293	Drive Gear Bushing	4290	Main Shaft Assembly
0452	Drag Spring Washer	2346	Drag Washer "C"(cloth)	4306	Lock Out Spring Holder
0540	Drag Click Screw	2433	Pressure Screw	4307	Anti-Reverse Lock Out
0579	Eared Washer "B"	2458	Drag Knob Screw	4308	Anti-Reverse Pawl
0584	Hold Click Spring	2541	Anti-Reverse Pawl Screw	4309	Anti-Reverse Cam
0787	Nut Lock Screw	2852	Handle Screw Lock	4310	Drag Click
0792	Bearing Retainer Screw	3681	Bail Spring Guide (A)	4315	Rotor
0815	Line Roller Washer	3682	Bail Spring	4317	Bail Spring Cover
0826	Key Washer "A"	3695	Oscillating Gear	4318	Bail Trip Lever
0940	Multi-Purpose Screw	3747	Slider Retainer Screw	4379	Anti-Reverse Lever
1008	Handle Lock Washer	3766	Oscillating Slider	4392	Bail Arm
1030	Handle Assembly	3767	Oscillating Slider Retainer	4398	Bail Assembly
1310	Line Roller Screw	3769	Drag Knob	4399	Side Cover
1442	Handle Screw Cap	3869	Anti-Reverse Lock Out Spring	4400	Body
1506	Bail Spring Cover Screw	3873	Anti-Reverse Pawl Spring		
1511	Lever Spring	3882	Spool Assembly (S-4)		

(070602)