



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	1442	Handle Screw Cap	4051	Bail Spring
0041	Drive Gear Washer	1504	Multi-Purpose Screw	4096	Drag Shaft
0071	Rotor Nut	1695	Drag Knob Screw	4097	Pressure Screw
0080	Line Roller	2257	Drag Washer "H" (blue)	4111	Pinion Gear
0111	Drag Coil Spring	2283	Anti-Reverse Pawl Screw	4112	Drive Gear
0345	Anti-Reverse Lever Screw	2293	Drive Gear Bushing	4113	Drag Knob Assembly
0452	Drag Spring Washer	2852	Handle Screw Lock	4286	Main Shaft Assembly
0540	Drag Click Screw	3471	Anti-Reverse Cam Spring	4295	Bail Spring Guide (B)
0543	Side Cover Screw	3673	Oscillating Gear	4299	Anti-Reverse Cam
0574	Drag Washer "C" (cloth)	3744	Drag Click	4379	Anti-Reverse Lever
0579	Eared Washer "B"	3745	Oscillating Slider	4388	Bail Arm
0584	Hold Click Spring	3746	Oscillating Slider Retainer	5594	Bail Trip Lever
0787	Nut Lock Screw	3747	Slider Retainer Screw	5613	Bail Spring Cover
0792	Bearing Retainer Screw	3848	Bail Spring Guide (A)	5614	Bail Assembly
0815	Line Roller Washer	3853	Anti-Reverse Lock Out	5616	Counterbalance Cover
0940	Multi-Purpose Screw	3854	Anti-Reverse Lock Out Spring	6859	Spool Assembly
1008	Handle Lock Washer	3855	Lock Out Spring Holder	7261	Side Cover
1025	Handle Assembly	3856	Anti-Reverse Pawl	7262	Body
1310	Line Roller Screw	3857	Anti-Reverse Pawl Spring	7272	Rotor