


NEXAVE 1000R

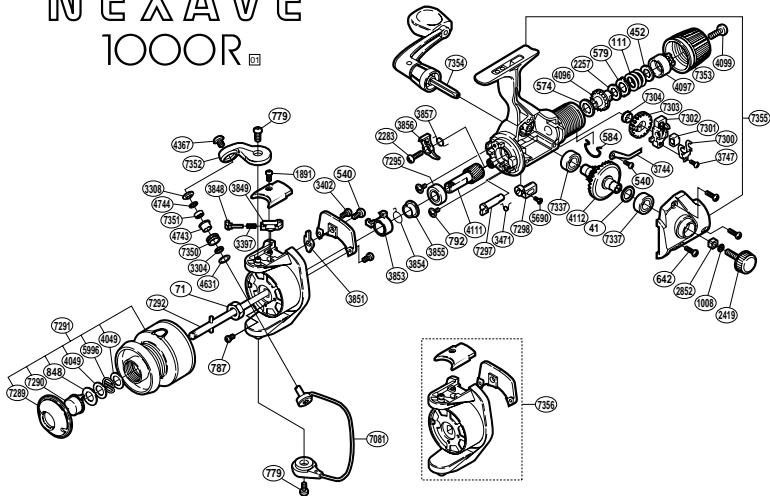

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	3471	Anti-Reverse Cam Spring	7081	Bail Assembly
0071	Rotor Nut	3744	Drag Click	7289	Push Button Collar
0111	Drag Coil Spring	3747	Slider Retainer Screw	7290	Push Button
0452	Drag Spring Washer	3848	Bail Spring Guide (A)	7291	Spool Assembly
0540	Multi-Purpose Screw	3849	Bail Spring Guide (B)	7292	Main Shaft
0574	Drag Washer "C" (cloth)	3851	Bail Trip Lever	7295	Ball Bearing
0579	Eared Washer "B"	3853	Anti-Reverse Lock Out	7297	Anti-Reverse Cam
0584	Hold Click Spring	3854	Anti-Reverse Lock Out Spring	7298	Anti-Reverse Lever
0642	Side Cover Screw	3855	Lock Out Spring Holder	7300	Oscillating Slider Retainer
0779	Multi-Purpose Screw	3856	Anti-Reverse Pawl	7301	Oscillating Slider Inner
0787	Nut Lock Screw	3857	Anti-Reverse Pawl Spring	7302	Oscillating Slider
0792	Bearing Retainer Screw	4049	Large Hole Washer	7303	Oscillating Gear
0848	Small Hole Washer	4096	Drag Shaft	7304	Oscillating Gear Bushing
1008	Handle Lock Washer	4097	Pressure Screw	7337	Ball Bearing
1891	Bail Spring Cover Screw	4099	Drag Knob Screw	7350	Line Roller
2257	Drag Washer "H" (blue)	4111	Pinion Gear	7351	Line Roller Bearing
2283	Anti-Reverse Pawl Screw	4112	Drive Gear	7352	Bail Arm
2419	Handle Screw Cap	4367	Line Roller Screw	7353	Drag Knob
2852	Handle Screw Lock	4631	Spacer	7354	Handle Assembly
3304	Bearing Spacer	4743	Line Roller Bushing	7355	Body Set
3308	Line Roller Washer	4744	Roller Bearing Seal	7356	Rotor Assembly
3397	Bail Spring	5690	Anti-Reverse Lever Screw		
3402	Cover Screw	5996	Locking Spring		