


NEXAVE

3000MR 01

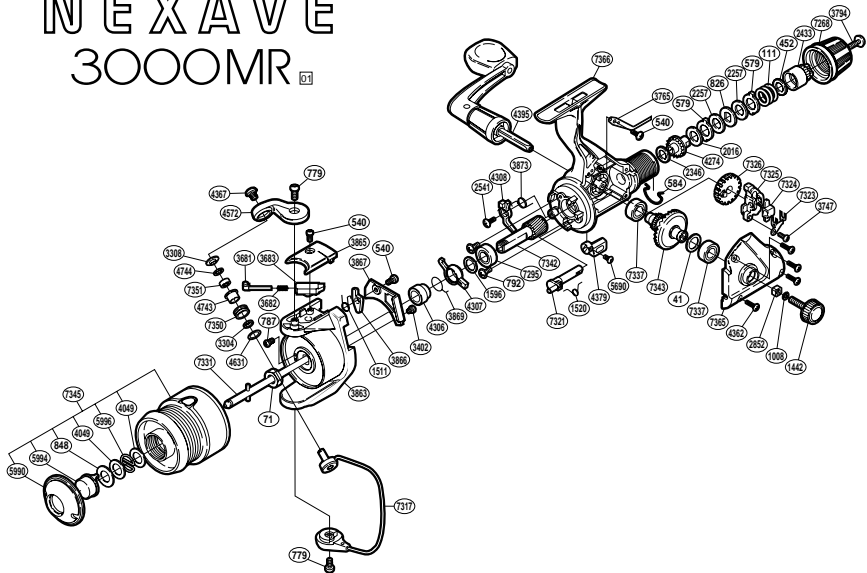

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	3308	Line Roller Washer	4631	Spacer
0071	Rotor Nut	3402	Cover Screw	4743	Line Roller Bushing
0111	Drag Coil Spring	3681	Bail Spring Guide (A)	4744	Roller Bearing Seal
0452	Drag Spring Washer	3682	Bail Spring	5690	Anti-Reverse Lever Screw
0540	Multi-Purpose Screw	3683	Bail Spring Guide (B)	5990	Push Button Collar
0579	Eared Washer "B"	3747	Slider Retainer Screw	5994	Push Button
0584	Hold Click Spring	3765	Drag Click	5996	Locking Spring
0779	Multi-Purpose Screw	3794	Drag Knob Screw	7268	Drag Knob
0787	Nut Lock Screw	3863	Rotor	7295	Ball Bearing
0792	Bearing Retainer Screw	3865	Bail Spring Cover	7317	Bail Assembly
0826	Key Washer "A"	3866	Bail Trip Lever	7321	Anti-Reverse Cam
0848	Small Hole Washer	3867	Counterbalance Cover	7323	Oscillating Slider Retainer
1008	Handle Lock Washer	3869	Anti-Reverse Lock Out Spring	7324	Oscillating Slider Inner
1442	Handle Screw Cap	3873	Anti-Reverse Pawl Spring	7325	Oscillating Slider
1511	Lever Spring	4049	Large Hole Washer	7326	Oscillating Gear
1520	Anti-Reverse Cam Spring	4274	Drag Shaft	7331	Main Shaft
1596	Bushing Washer	4306	Lock Out Spring Holder	7337	Ball Bearing
2016	Drag Washer "H" (cloth)	4307	Anti-Reverse Lock Out	7342	Pinion Gear
2257	Drag Washer "H" (blue)	4308	Anti-Reverse Pawl	7343	Drive Gear
2346	Drag Washer "C" (cloth)	4362	Side Cover Screw	7345	Match Spool Assembly
2433	Pressure Screw	4367	Line Roller Screw	7350	Line Roller
2541	Anti-Reverse Pawl Screw	4379	Anti-Reverse Lever	7351	Line Roller Bearing
2852	Handle Screw Lock	4395	Handle Assembly	7365	Side Cover
3304	Bearing Spacer	4572	Bail Arm	7366	Body