


NEXAVE 3000R D1

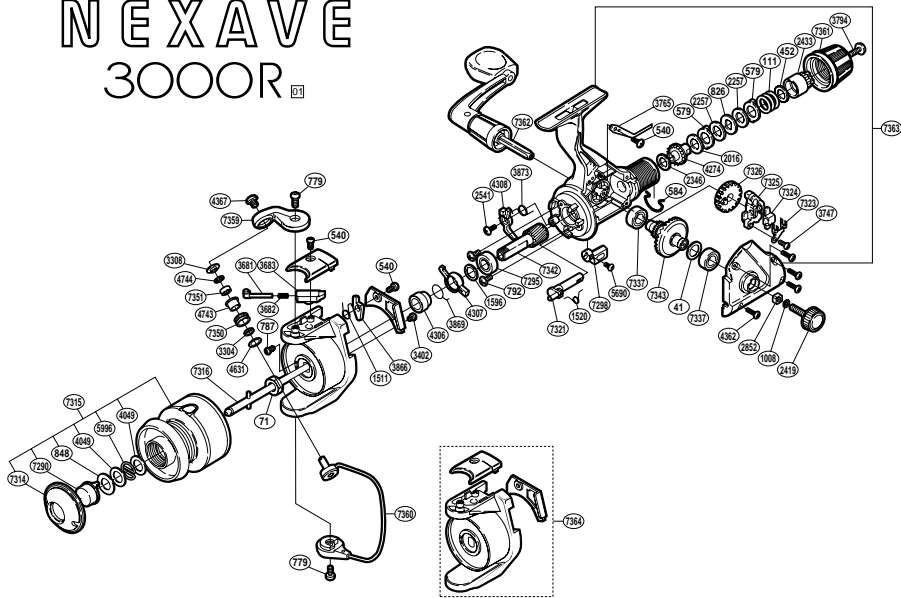

'01 NEX 3000R

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	3304	Bearing Spacer	5996	Locking Spring
0071	Rotor Nut	3308	Line Roller Washer	7290	Push Button
0111	Drag Coil Spring	3402	Cover Screw	7295	Ball Bearing
0452	Drag Spring Washer	3681	Bail Spring Guide (A)	7298	Anti-Reverse Lever
0540	Multi-Purpose Screw	3682	Bail Spring	7314	Push Button Collar
0579	Eared Washer "B"	3683	Bail Spring Guide (B)	7315	Spool Assembly
0584	Hold Click Spring	3747	Slider Retainer Screw	7316	Main Shaft
0779	Multi-Purpose Screw	3765	Drag Click	7321	Anti-Reverse Cam
0787	Nut Lock Screw	3794	Drag Knob Screw	7323	Oscillating Slider Retainer
0792	Bearing Retainer Screw	3866	Bail Trip Lever	7324	Oscillating Slider Inner
0826	Key Washer "A"	3869	Anti-Reverse Lock Out Spring	7325	Oscillating Slider
0848	Small Hole Washer	3873	Anti-Reverse Pawl Spring	7326	Oscillating Gear
1008	Handle Lock Washer	4049	Large Hole Washer	7337	Ball Bearing
1511	Lever Spring	4274	Drag Shaft	7342	Pinion Gear
1520	Anti-Reverse Cam Spring	4306	Lock Out Spring Holder	7343	Drive Gear
1596	Bushing Washer	4307	Anti-Reverse Lock Out	7350	Line Roller
2016	Drag Washer "H" (cloth)	4308	Anti-Reverse Pawl	7351	Line Roller Bearing
2257	Drag Washer "H" (blue)	4362	Side Cover Screw	7359	Bail Arm
2346	Drag Washer "C" (cloth)	4367	Line Roller Screw	7360	Bail Assembly
2419	Handle Screw Cap	4631	Spacer	7361	Drag Knob
2433	Pressure Screw	4743	Line Roller Bushing	7362	Handle Assembly
2541	Anti-Reverse Pawl Screw	4744	Roller Bearing Seal	7363	Body Set
2852	Handle Screw Lock	5690	Anti-Reverse Lever Screw	7364	Rotor Assembly

(130309)