


# NEXAVE

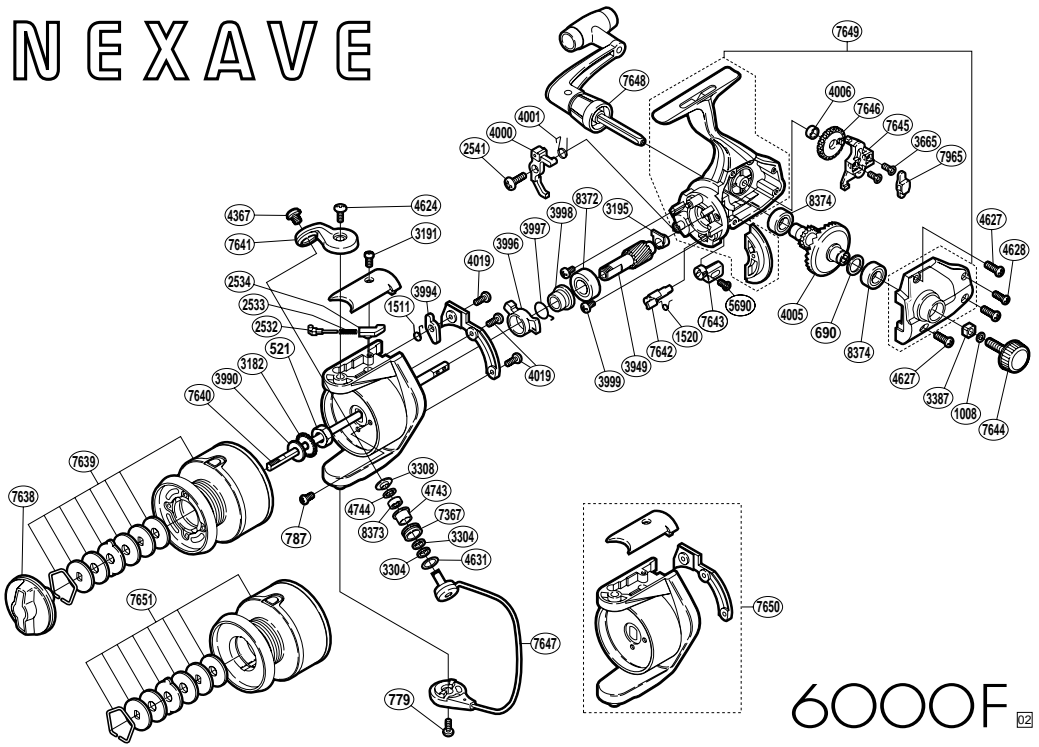

## 6000F 02

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0521	Rotor Nut	3994	Bail Trip Lever	7639	Spool Assembly
0690	Drive Gear Washer	3996	Anti-Reverse Lock Out	7640	Main Shaft
0779	Bail Hold Support Screw	3997	Anti-Reverse Lock Out Spring	7641	Bail Arm
0787	Nut Lock Screw	3998	Lock Out Spring Holder	7642	Anti-Reverse Cam
1008	Handle Lock Washer	3999	Bearing Retainer Screw	7643	Anti-Reverse Lever
1511	Lever Spring	4000	Anti-Reverse Pawl	7644	Handle Screw Cap
1520	Anti-Reverse Cam Spring	4001	Anti-Reverse Pawl Spring	7645	Oscillating Slider
2532	Bail Spring Guide (A)	4005	Drive Gear	7646	Oscillating Gear
2533	Bail Spring	4006	Oscillating Gear Bushing	7647	Bail Assembly
2534	Bail Spring Guide (B)	4019	Counterbalance Cover Screw	7648	Handle Assembly
2541	Anti-Reverse Pawl Screw	4367	Line Roller Screw	7649	Body Assembly
3182	Spool Support	4624	Bail Arm Screw	7650	Rotor Assembly
3191	Bail Spring Cover Screw	4627	Side Cover Screw (large)	7965	Oscillating Slider Inner
3195	Bushing	4628	Side Cover Screw (small)	8372	Ball Bearing
3304	Bearing Spacer	4631	Spacer	8373	Line Roller Bearing
3308	Line Roller Washer	4743	Line Roller Bushing	8374	Ball Bearing
3387	Handle Screw Lock	4744	Roller Bearing Seal		
3665	Slider Retainer Screw	5690	Anti-Reverse Lever Screw		
3949	Pinion Gear	7367	Line Roller		
3990	Spool Washer	7638	Drag Knob Assembly	7651	Spare Spool Assembly