



1000FGT 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	3465	Anti-Reverse Lock Out Spring	4055	Slider Retainer Screw
0071	Rotor Nut	3466	Anti-Reverse Lock Out	4065	Worm B
0543	Side Cover Screw	3467	Bushing Washer	4154	Rotor
0787	Nut Lock Screw	3468	Bearing Retainer Screw	4403	Line Roller Screw
0930	Ball Bearing	3469	Bearing Retainer	4480	Bail Arm Screw
1008	Handle Lock Washer	3471	Anti-Reverse Cam Spring	4482	Bail Arm
1021	Handle Assembly	3472	Anti-Reverse Cam	4498	Line Roller Collar (A)
1442	Handle Screw Cap	3473	Anti-Reverse Pawl Screw	4499	Line Roller Collar (B)
1490	Anti-Reverse Lever Screw	3474	"O" Ring	4852	Main Shaft
1504	Multi-Purpose Screw	3475	Anti-Reverse Pawl	5061	Drag Knob
1509	Bail Spring	3476	Anti-Reverse Pawl Spring	5062	Spool Assembly
2275	Bail Spring Guide (B)	3478	Worm Shaft Spacer	5063	Pinion Gear
2293	Drive Gear Bushing	3481	Bushing	5064	Idle Gear
2298	Spacer	3485	Oscillating Slider Bushing	5065	Worm Shaft
2404	"E" Lock	3488	Oscillating Guide Holder	5066	Drive Gear
2852	Handle Screw Lock	3489	Oscillating Guide	5067	Side Cover
3307	Line Roller Bushing	3655	Cover Screw	5068	Body
3359	Line Roller Washer	3834	Bail Spring Cover	5069	Anti-Reverse Lever
3455	Spool Washer	3835	Counterbalance Cover	5070	Rear Protector
3456	Spool Support	3836	Bail Trip Lever Screw	5106	Oscillating Pawl
3459	Bail Spring Guide (A)	3936	Oscillating Pawl Cover Screw	5350	Line Roller
3462	Bail Trip Lever	4053	Oscillating Pawl Cover	5363	Bail Assembly
3464	Lock Out Spring Holder	4054	Oscillating Slider		