



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2293	Drive Gear Bushing	3855	Lock Out Spring Holder
0041	Drive Gear Washer	2852	Handle Screw Lock	3856	Anti-Reverse Pawl
0071	Rotor Nut	3359	Line Roller Washer	3857	Anti-Reverse Pawl Spring
0345	Anti-Reverse Lever Screw	3397	Bail Spring	3858	Anti-Reverse Cam
0543	Side Cover Screw (black)	3455	Spool Washer	4351	Anti-Reverse Lever
0642	Side Cover Screw (silver)	3471	Anti-Reverse Cam Spring	4568	Bail Arm
0787	Nut Lock Screw	3645	Drag Knob	5625	Line Roller Spacer
0792	Bearing Retainer Screw	3646	Main Shaft	5628	Line Roller Collar
0930	Ball Bearing	3655	Cover Screw	5629	Line Roller Bushing
0940	Multi-Purpose Screw	3657	Pinion Gear	5630	Line Roller
1008	Handle Lock Washer	3662	Drive Gear	6792	Bail Assembly
1025	Handle Assembly	3664	Oscillating Slider	6794	Bail Trip Lever
1310	Line Roller Screw	3665	Slider Retainer Screw	6847	Spool Assembly
1427	Spool Support	3673	Oscillating Gear	7055	Bail Spring Cover
1442	Handle Screw Cap	3848	Bail Spring Guide (A)	7059	Rotor
1504	Bail Spring Cover Screw	3849	Bail Spring Guide (B)	7060	Counterbalance Cover
1506	Bail Trip Lever Screw	3853	Anti-Reverse Lock Out	7061	Body Assembly
2283	Anti-Reverse Pawl Screw	3854	Anti-Reverse Lock Out Spring		