



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0743	Drive Gear Washer	6127	Bail Hold Support Screw	6244	Roller Clutch Ring
1506	Clutch Cover Screw	6156	Set Screw	6245	Pinion Gear
2030	Ball Bearing	6166	Line Roller	6246	Friction Ring
2110	Worm Shaft Retainer Screw	6175	Waterproof Cover	6247	Anti-Reverse Cam Spring
2254	Ball Bearing	6176	Roller Clutch Waterproof	6248	Anti-Reverse Waterproof
2298	Spacer	6179	Bearing Washer	6249	Worm Bushing
2401	Ball Bearing	6189	Bearing Waterproof (C)	6250	Idle Gear Spacer
3204	Ball Bearing	6203	Protector Screw (A)	6251	Worm Shaft
3245	Ball Bearing	6216	"O" Ring	6252	Bearing Waterproof (C)
3344	Ball Bearing	6219	Drag Knob	6253	Bearing Screw (large)
3483	Anti-Reverse Cam Screw	6220	Spool Assembly	6254	Drive Gear
4762	Roller Clutch Screw	6221	Spool Washer	6255	Bearing Screw (small)
4763	Roller Clutch Assembly	6222	Bearing Bushing	6256	Side Cover
4765	Anti-Reverse Cam	6223	Bearing Waterproof (A)	6257	Side Cover Flange
4768	Idle Gear	6224	Spool Support	6258	Flange Waterproof
5802	Line Roller Screw Cap	6225	Nut Lock Screw	6259	Rear Shield
5803	Bail Spring Guide (A)	6226	Rotor Nut Lock Plate	6260	Rear Protector
5804	Spring Guide (A) Support	6227	Bearing Washer	6261	Side Cover Screw (large)
5806	Bail Spring Guide (B)	6228	Bearing Waterproof (B)	6262	Handle Screw Cap (A)
5808	Bail Arm Washer	6229	Rotor Nut	6263	Handle Assembly
5812	Bail Arm Screw Collar	6230	Main Shaft	6264	Side Cover Screw (small)
5821	Bail Hold Support Spacer	6231	Line Roller Washer	6265	Oscillating Pawl Cover Screw
5823	Lever Spring Guide (A)	6232	Line Roller Screw	6266	Oscillating Pawl Cover
5824	Bail Trip Lever Spring	6233	Bail Spring	6267	Oscillating Slider Bushing
5825	Lever Spring Guide (B)	6234	Line Roller Support Collar	6268	Oscillating Pawl
5988	Spacer	6235	Bail Arm	6269	Oscillating Slider
6031	Protector Screw (B)	6236	Bail Arm Screw	6270	Slider Retainer Screw
6046	Idle Gear Washer	6237	Rotor Protector	6271	Worm Shaft Retainer
6055	Rear Protector Screw	6238	Bail Spring Cover	6272	Worm Shaft Retainer Washer
6057	Cap Screw	6239	Bail Trip Lever	6273	Oscillating Guide
6070	Wrench (accessory)	6240	Spacer	6274	Anti-Reverse Lever
6073	Bearing Spacer	6241	Bail Assembly	6275	Body
6074	Line Roller Bushing	6242	Rotor	6276	Handle Screw Cap (B)
6075	Roller Bearing Seal	6243	Rotor Ring	6277	Side Cover Screw (medium)

STELLA
10000F
FLUIDRIVE II