



## 4000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4638	Line Roller Washer	4824	Bail Spring Cover
0041	Drive Gear Washer	4649	Spacer	4825	Bail Hold Support Guard
0071	Rotor Nut	4650	Bail Hold Support Shaft	4826	Bail Hold Support Spacer
0787	Multi-Purpose Screw	4652	Lever Spring Guide (B)	4828	Rotor
0930	Ball Bearing	4654	Lever Spring Guide (A)	4829	Roller Clutch Screw
1008	Handle Lock Washer	4656	Trip Lever Spacer	4830	Pinion Gear
1506	Clutch Cover Screw	4661	Anti-Reverse Cam Ring	4831	Ball Bearing
1520	Anti-Reverse Cam Spring	4675	Oscillating Pawl Cover Screw	4832	Anti-Reverse Cam
1891	Multi-Purpose Screw	4677	Oscillating Slider Bushing	4833	Worm Bushing (front)
2298	Spacer	4678	Oscillating Pawl	4834	Idle Gear
2309	Slider Retainer Screw	4698	Bail Spring Guide (A)	4835	Worm Shaft
2362	Spool Support	4699	Bail Spring	4836	Worm Bushing (rear)
2404	"E" Lock	4700	Bail Spring Guide (B)	4837	Side Cover Flange
2852	Handle Screw Lock	4702	Bail Arm Bushing	4838	Drive Gear Bushing
3081	Side Cover Screw	4704	Bail Spring Cover Screw (large)	4839	Drive Gear
3304	Bearing Spacer	4710	Lever Spring	4840	Side Cover
3306	Line Roller Bearing	4711	Bail Trip Lever	4841	Body
3309	Line Roller Screw	4714	Roller Clutch Assembly	4842	Oscillating Guide (A)
3366	Anti-Reverse Lever Screw	4733	Oscillating Pawl Cover	4843	Oscillating Guide (B)
3402	Bail Spring Cover Screw (small)	4734	Oscillating Slider	4844	Worm Shaft Retainer
3414	Drag Knob	4803	Worm Shaft Spacer	4845	Rear Cover
3468	Rear Cover Screw (short)	4810	Rear Protector Screw	4846	Rear Protector
3503	Spool Washer	4814	Anti-Reverse Lever	4847	Handle Assembly
4421	Handle Screw Cap	4821	Spool Assembly	5350	Line Roller
4636	Line Roller Bushing	4822	Main Shaft	5357	Bail Assembly
4637	Line Roller Spacer	4823	Bail Arm	5542	Bail Arm Screw