



# SUSTAIN 2000FA 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	4640	Bail Spring	4672	Rear Protector Screw
0930	Ball Bearing	4641	Bail Spring Guide (B)	4673	Handle Screw Cap
1008	Handle Lock Washer	4643	Bail Arm Bushing	4674	Side Cover Screw
1891	Cover Screw (large)	4644	Bail Arm	4675	Oscillating Pawl Cover Screw
2110	Worm Shaft Retainer Screw	4646	Bail Hold Support Guard	4676	Oscillating Pawl Cover
2254	Ball Bearing	4647	Bail Hold Support Spacer	4677	Oscillating Slider Bushing
2298	Spacer	4649	Spacer	4678	Oscillating Pawl
2401	Ball Bearing	4650	Bail Hold Support Shaft	4679	Oscillating Slider
2404	"E" Lock	4652	Lever Spring Guide (B)	4680	Slider Retainer Screw
2715	Rotor Nut	4653	Lever Spring	4681	Oscillating Guide
2852	Handle Screw Lock	4654	Lever Spring Guide (A)	4682	Worm Shaft Retainer Washer
3304	Bearing Spacer	4656	Trip Lever Spacer	4683	Worm Shaft Retainer
3306	Line Roller Bearing	4657	Roller Clutch Screw	4684	"E" Lock
3309	Line Roller Screw	4658	Clutch Cover Screw	4685	Anti-Reverse Lever
3402	Bail Spring Cover Screw (small)	4659	Roller Clutch Assembly	4687	Handle Assembly
3455	Spool Washer	4660	Pinion Gear	4688	Spool Assembly
3567	Bushing	4661	Anti-Reverse Cam Ring	4689	Bail Spring Cover
3571	Anti-Reverse Cam Screw	4662	Anti-Reverse Cam	4691	Rotor
3639	Worm Shaft Retainer Spacer	4663	Anti-Reverse Cam Spring	4692	Bail Trip Lever
4632	Drag Knob	4664	Worm Bushing	4693	Worm Shaft
4634	Spool Support	4665	Idle Gear	4694	Body
4635	Main Shaft	4667	Drive Gear	5350	Line Roller
4636	Line Roller Bushing	4668	Side Cover	5352	Bail Assembly
4637	Line Roller Spacer	4669	Side Cover Flange	5541	Bail Arm Screw
4638	Line Roller Washer	4670	Rear Shield		
4639	Bail Spring Guide (A)	4671	Rear Protector		