



# SUSTAIN 4000FA 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4654	Lever Spring Guide (A)	4718	Lever Spring Guide (A)
0041	Drive Gear Washer	4656	Trip Lever Spacer	4719	Anti-Reverse Cam
0071	Rotor Nut	4674	Side Cover Screw (short)	4720	Worm Bushing (front)
0787	Nut Lock Screw	4675	Oscillating Pawl Cover Screw	4721	Idle Gear
0930	Ball Bearing	4677	Oscillating Slider Bushing	4722	Worm Shaft
1506	Clutch Cover Screw	4678	Oscillating Pawl	4723	Worm Bushing (rear)
1891	Guard Screw	4695	Drag Knob	4724	Ball Bearing
2110	Worm Shaft Retainer Screw	4696	Spool Assembly	4725	Drive Gear
2254	Ball Bearing	4697	Main Shaft	4726	Side Cover
2298	Spacer	4698	Bail Spring Guide (A)	4727	Side Cover Flange
2309	Slider Retainer Screw	4699	Bail Spring	4728	Rear Shield
2362	Spool Support	4700	Bail Spring Guide (B)	4729	Rear Protector
2404	"E" Lock	4702	Bail Arm Bushing	4730	Rear Protector Screw
3304	Bearing Spacer	4703	Bail Arm	4731	Handle Screw Cap
3306	Line Roller Bearing	4704	Bail Spring Cover Screw (large)	4732	Side Cover Screw (long)
3309	Line Roller Screw	4705	Bail Spring Cover	4733	Oscillating Pawl Cover
3402	Bail Spring Cover Screw (small)	4706	Bail Hold Support Guard	4734	Oscillating Slider
3503	Spool Washer	4707	Bail Hold Support Spacer	4735	Oscillating Guide
3637	Worm Shaft Retainer Washer	4709	Rotor	4736	Worm Shaft Retainer
3639	Worm Shaft Retainer Spacer	4710	Lever Spring	4737	Anti-Reverse Lever
3936	Anti-Reverse Cam Screw	4711	Bail Trip Lever	4738	Body
4636	Line Roller Bushing	4712	Rotor Spacer	4739	Handle Assembly
4637	Line Roller Spacer	4713	Roller Clutch Screw	5350	Line Roller
4638	Line Roller Washer	4714	Roller Clutch Assembly	5353	Bail Assembly
4649	Spacer	4715	Pinion Gear	5542	Bail Arm Screw
4650	Bail Hold Support Shaft	4716	Lever Spring Guide (B)		
4652	Lever Spring Guide (B)	4717	Lever Spring		