



SUSTAIN 6000FA 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0521	Rotor Nut	4741	Spool Assembly	4768	Idle Gear
0540	Bail Spring Cover Screw (large)	4742	Main Shaft	4769	Worm Shaft
0690	Drive Gear Washer	4743	Line Roller Bushing	4770	Drive Gear
0787	Nut Lock Screw	4744	Roller Bearing Seal	4771	Side Cover
0998	Cover Screw (long)	4745	Bail Spring Guide (A)	4772	Side Cover Flange
1506	Clutch Cover Screw	4746	Spring Guide (A) Support	4773	Rear Shield
2110	Worm Shaft Retainer Screw	4747	Bail Spring	4774	Rear Protector
2254	Ball Bearing	4748	Bail Spring Guide (B)	4775	Side Cover Screw (large)
2404	"E" Lock	4750	Bail Arm Bushing	4776	Handle Screw Cap
3182	Spool Support	4751	Bail Arm	4777	Oscillating Pawl Cover Screw
3204	Ball Bearing	4752	Bail Spring Cover	4778	Oscillating Pawl Cover
3304	Bearing Spacer	4753	Bail Hold Support Guard	4779	Oscillating Slider Bushing
3306	Line Roller Bearing	4754	Bail Hold Support Spacer	4780	Oscillating Pawl
3309	Line Roller Screw	4755	Bail Assembly	4781	Oscillating Slider
3402	Bail Spring Cover Screw (small)	4756	Bail Hold Support Shaft	4782	Slider Retainer Screw
3483	Anti-Reverse Cam Screw	4757	Rotor	4783	Oscillating Guide
3503	Spool Washer	4758	Lever Spring Guide (B)	4784	Worm Shaft Retainer Washer
3962	Spacer	4759	Lever Spring	4785	Worm Shaft Retainer
4631	Spacer	4760	Lever Spring Guide (A)	4786	Worm Shaft Retainer Spacer
4638	Line Roller Washer	4761	Bail Trip Lever	4787	Anti-Reverse Lever
4649	Spacer	4762	Roller Clutch Screw	4788	Body
4656	Trip Lever Spacer	4763	Roller Clutch Assembly	4789	Handle Assembly
4674	Side Cover Screw (small)	4764	Pinion Gear	5354	Line Roller
4723	Worm Bushing (rear)	4765	Anti-Reverse Cam	5543	Bail Arm Screw
4730	Rear Protector Screw	4766	Anti-Reverse Cam Spring		
4740	Drag Knob	4767	Worm Bushing (front)		