


# TRINIDAD TN 50

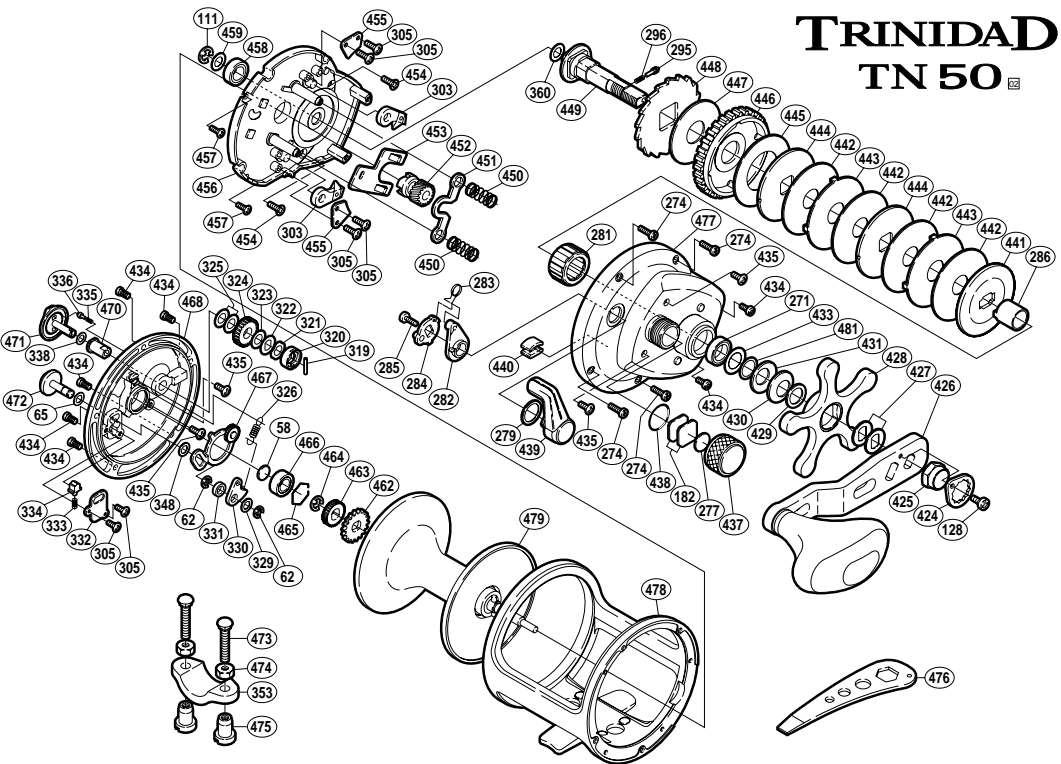

TGT No.	PARTS NAMES	TGT No.	PARTS NAMES	TGT No.	PARTS NAMES
0058	Spacer "B"	0333	Click Spring	0451	Yoke
0062	Click Pawl Retainer	0334	Click Spring Holder	0452	Pinion Gear
0065	Spacer (A)	0335	"BR" Click Spring	0453	Yoke Plate
0111	Drive Shaft Retainer	0336	"BR" Click Pin	0454	Set Plate Screw (B)
0128	Handle Nut Plate Screw	0338	"BR" Washer (D)	0455	Anti-Reverse Pawl Keeper
0182	Cast Control Spacer (A)	0348	Spacer (C)	0456	Set Plate
0271	Ball Bearing	0360	Drive Shaft Washer (B)	0457	Set Plate Screw (A)
0274	Right Side Plate Screw (A)	0424	Handle Nut Plate	0458	Ball Bearing
0277	Cast Control Spacer (B)	0425	Handle Nut	0459	Drive Shaft Washer (A)
0279	Smoother	0426	Handle Assembly	0462	Click Gear
0281	Roller Clutch Bearing	0427	Drive Shaft Shield	0463	"BR" Gear (A)
0282	Eccentric Cam Bushing	0428	Star Drag	0464	Click Gear Retainer
0283	Clutch Spring	0429	Star Drag Washer	0465	Bearing Retainer
0284	Clutch Cam	0430	Drag Spring Washer (10L)	0466	Ball Bearing
0285	Clutch Lever Screw	0431	Drag Spring Washer (10H)	0467	"BR" Set Plate
0286	Roller Clutch Inner Tube	0433	Bearing Seal	0468	Left Side Plate
0295	Click Pin	0434	Side Plate Screw	0470	"BR" Bushing
0296	Click Spring	0435	Multi-Purpose Screw	0471	"BR" Dial
0303	Anti-Reverse Pawl	0437	Cast Control Cap	0472	Click Button
0305	Multi-Purpose Screw	0438	"O" Ring	0477	Right Side Plate
0319	"BR" Cam Pin	0439	Clutch Lever	0478	One-Piece Frame
0320	"BR" Cam	0440	Line Clip	0479	Spool Assembly
0321	"BR" Friction Washer	0441	Key Washer	0481	Bearing Thrust Washer
0322	"BR" Washer (C)	0442	Drag Washer (D)		
0323	"BR" Washer (A)	0443	Eared Washer (E)		
0324	"BR" Gear (C)	0444	Key Washer (C)		
0325	"BR" Washer (B)	0445	Drag Washer (B)	0353	Rod Clamp (accessory)
0326	Click Pawl Spring	0446	Drive Gear	0473	Rod Clamp Bolt (accessory)
0329	Spacer (B)	0447	Drag Washer (A)	0474	Rod Clamp Nut (B) (accessory)
0330	Click Pawl	0448	Anti-Reverse Ratchet	0475	Rod Clamp Nut (A) (accessory)
0331	Click Pawl Spacer	0449	Drive Shaft		
0332	Click Spring Retainer	0450	Yoke Spring	0476	Wrench (accessory)