


TX

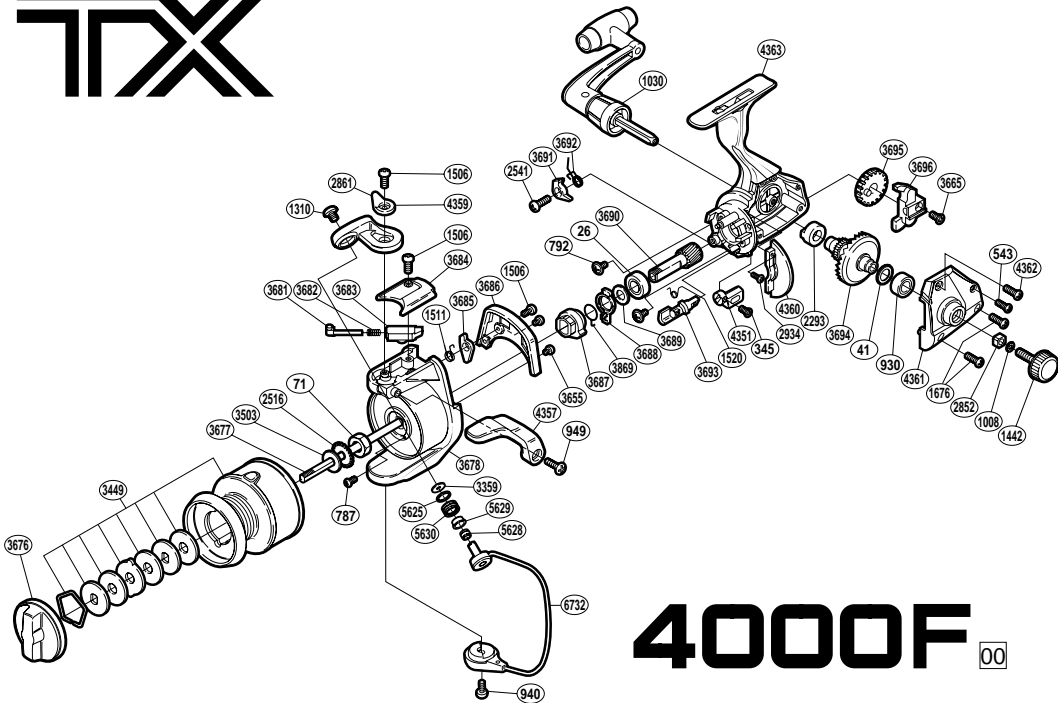

4000F

00

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2852	Handle Screw Lock	3691	Anti-Reverse Pawl
0041	Drive Gear Washer	2861	Trigger Cam	3692	Anti-Reverse Pawl Spring
0071	Rotor Nut	2934	Flange Screw	3693	Anti-Reverse Cam
0345	Anti-Reverse Lever Screw	3359	Line Roller Washer	3694	Drive Gear
0543	Side Cover Screw (small)	3449	Spool Assembly	3695	Oscillating Gear
0787	Nut Lock Screw	3503	Spool Washer	3696	Oscillating Slider
0792	Bearing Retainer Screw	3655	Cover Screw	3869	Anti-Reverse Lock Out Spring
0930	Ball Bearing	3665	Slider Retainer Screw	4351	Anti-Reverse Lever
0940	Bail Hold Support Screw	3676	Drag Knob	4357	Quick-Fire II Trigger
0949	Trigger Screw	3677	Main Shaft	4359	Bail Arm
1008	Handle Lock Washer	3678	Rotor	4360	Side Cover Flange
1030	Handle Assembly	3681	Bail Spring Guide (A)	4361	Side Cover
1310	Line Roller Screw	3682	Bail Spring	4362	Side Cover Screw (large-silver)
1442	Handle Screw Cap	3683	Bail Spring Guide (B)	4363	Body
1506	Multi-Purpose Screw	3684	Bail Spring Cover	5625	Line Roller Spacer
1511	Lever Spring	3685	Bail Trip Lever	5628	Line Roller Collar
1520	Anti-Reverse Cam Spring	3686	Counterbalance Cover	5629	Line Roller Bushing
1676	Side Cover Screw (large-black)	3687	Anti-Reverse Ratchet	5630	Line Roller
2293	Drive Gear Bushing	3688	Anti-Reverse Lock Out	6732	Bail Assembly
2516	Spool Support	3689	Bushing Washer		
2541	Anti-Reverse Pawl Screw	3690	Pinion Gear		

(110830)