



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0013	Lever Spring	0940	Multi-Purpose Screw	1883A	Anti-Reverse Lock Out
0018	Line Roller	0948	Multi Purpose Screw	1884A	Anti-Reverse Lock Out Spring
0026	Ball Bearing	1008	Handle Lock Washer	1885A	Pinion Spacer
0041	Drive Gear Washer	1083	Slider Retainer Screw	1886	Bail Trip Lever Screw
0049	Lock Washer	1302	Line Roller Screw	1927	Spool Washer
0053	Anti-Reverse Cam Spring	1418	Drag Knob	2852	Handle Screw Lock
0071	Rotor Nut	1427	Spool Support	4142	Spool Assembly
0345	Anti-Reverse Lever Screw	1432	Bail Arm	4144	Main Shaft
0539	Anti-Reverse Pawl Spring	1437	Pinion Gear	4146	Bail Trip Lever
0540	Anti-Reverse Pawl Screw	1438	Anti-Reverse Pawl	4158	Bail Spring
0543	Side Cover Screw	1439	Drive Gear	4159	Oscillating Spacer
0784	Line Roller Washer	1440	Oscillating Arm	4252	Bail Trip Cover
0787	Nut Lock Screw	1442	Handle Screw Cap	4253	Bail Spring Cover
0792	Bearing Retainer Screw	1443	Oscillating Block	4254	Bail Spring Cover Screw
0795	Bushing B	1444	Anti-Reverse Cam	4345	Bail Assembly
0884	Anti-Reverse Ratchet	1445	Anti-Reverse Lever	7105	Body Assembly
0930	Ball Bearing	1446	Handle Assembly	7243	Rotor